

# **MANUAL UTILIZARE UTOK 450 D**

## CUPRINS

1.	Familiarizarea cu produsul	6
2.	Notiuni de baza	8
3.	Operatiuni de baza	11
4.	Ecranul principal	12
5.	Multimedia	14
6.	Retea	16
7.	Setari	18
8.	Aplicatii	23
9.	Specificatii tehnice	25

## TOATE DREPTURILE REZERVATE

---

©2013. Toate drepturile sunt rezervate. Nicio parte a acestui document nu poate fi reprodusa fara permisiune. Toate marcele inregistrate si numele de brand mentionate in acest document apartin proprietarilor acestora. Desi au fost depuse toate eforturile pentru a asigura acuratetea continutului acestui manual, nu ne asumam responsabilitatea pentru erori, omiteri sau afirmatii de orice fel, daca acestea rezulta din neglijenta, accidente sau orice alta cauza. Desfasuram o politica a dezvoltarii continue si ne rezervam dreptul de a aduce modificari si imbunatatiri pentru dispozitiv, functiile, specificatiile sau a oricarei parti a acestuia, fara notificare prealabila. Dispozitivul poate contine marcaje preinstalate, link-uri catre tertе site-uri Internet si va poate permite sa accesati website-uri tertе. Acestea nu sunt afiliate cu noi, iar noi nu le sprijinim si nu ne asumam raspunderea pentru acestea. Daca accesati astfel de site-uri, luati masuri de precautie pentru siguranta si continut. Garantia cu raspundere limitata nu acopera manuale de utilizare sau alt software tert, setari, continut, date sau link-uri, fie incluse/descarcate in produs, fie incluse in timpul instalarii, asamblarii, livrarii sau in alt moment al lantului de livrare sau in alt mod si in orice fel achizitionat de dumneavoastra. In masura permisa de legislatia aplicabila, nu garantam ca oricare din software-urile noastre va va satisface certintele, va functiona cu orice hardware sau aplicatii software puse la dispozitie de tertе parti.



Manualul de utilizare este pus la dispozitie pentru a ghida utilizatorul cu privire la functionalitatea dispozitivului. Acesta nu este un certificat al tehnologiei. Unele functii pot varia datorita modificarilor software-ului sau datorita greselilor de printare.

## MASURI DE SIGURANTA

Va rugam sa cititi urmatoarele instructiuni de siguranta inainte de a utiliza aparatul.

- Nu utilizati telefonul in timp ce conduceti
- Nu puneti medii de stocare magnetice in apropierea telefonului. Radiatiile telefonului pot sterge informatiile stocate pe acestea.
- Nu lasati telefonul si accesoriile acestuia la indemana copiilor.
- Telefoanele mobile pot interfera cu dispozitive medicale functionale precum aparate auditive sau stimulatoare cardiace. Persoanele care au implanturi medicale active ar trebui sa tina telefonul mobil la cel putin 15 cm distanta fata de implant.
- Utilizarea castilor la volum ridicat poate duce la pierderea definitiva a auzului.
- Folositi un sistem hands-free wireless (headphone / headset) cu un emitor Bluetooth cu putere redusa.
- Asigurati-va ca telefonul mobil are o valoare SAR scazuta.
- Mentineti durata apelului scurta sau trimiteti un mesaj text in schimb (SMS). Acest sfat se aplica in special copiilor adolescenti sau femeilor insarcinate.
- Utilizati telefonul mobil atunci cand calitatea semnalului este buna.

## Atentionare:

- Nu demontati dispozitivul sau accesoriile. In caz contrar, producatorul nu este responsabil de plata daunelor provocate dispozitivului si accesoriilor, daune pe care garantia nu le acopera. Folositi doar baterii si dispozitive de incarcare originale. Va rugam sa efectuati periodic copii de rezerva pentru datele importante si sa le pastrati corespunzator. Compania nu este responsabila pentru imposibilitatea apelarii sau pierderea datelor cauzata de utilizarea incorecta, semnal slab, intreruperi de curent, etc.

- Nu puneti si nu utilizati telefonul intr-un loc cu gaze inflamabile, cum ar fi pompele de benzina.

- Temperatura recomandata pentru utilizarea dispozitivului este 5-35°C.

- Nu atingeti incarcatorul, cablul de alimentare sau priza cu mainile ude. Acest lucru poate duce la socul electric.

- Toate ecranele din acest manual sunt prezentate cu scop ilustrativ iar continutul afisat poate depinde de presetarile furnizorului de servicii, de operatorul de retea sau de cartela SIM. Daca anumite functii la care se face referire in acest manual sunt diferite de cele ale dispozitivului dumneavoastra, va rugam sa va raportati la dispozitiv.



Daca telefonul dumneavoastra sau orice alt accesoriu nu functioneaza normal, va rugam sa vizitati cea mai apropiata unitate de service autorizat. Personalul calificat va va asista, si daca va fi necesar, va organiza service-ul.

# 1. FAMILIARIZAREA CU PRODUSUL

## 1.1 INFORMATII GENERALE

---

UTOK 450 D este un telefon multi SIM care cuprinde functii precum **Android versiune 4.2, Wi-Fi, Procesor Dual-Core 1 GHz, Camera 5.0 MP**. Acest telefon este dotat cu doua sloturi SIM pentru doua cartele SIM diferite. Cartela SIM inserata in slot1 se numeste cartela SIM 1, iar cea in slot2 este cunoscuta ca SIM 2. Puteti alege sa utilizati SIM-urile in functie de nevoile personale si profesionale.

## 1.2 ASPECTUL DISPOZITIVULUI

---



1. Difuzor

2. Ecran tactil

3. Buton Acasa

4. Buton Meniu

5. Buton Inapoi

6. Camera frontala

7. Mufa casti

8. Buton volum

9. Port USB

10. Camera principala

11. Blit

12. Carcasa baterie

13. Buton pornire

14. Difuzor

## 2. NOTIUNI DE BAZA

### 2.1 INSTALAREA CARTELEI/BATERIEI

---

Va rugam sa opriti dispozitivul inainte de a insera sau inlatura bateria / cartela SIM sau cardul de memorie.

#### **Instalarea cartelei SIM si a Bateriei**

Dispozitivul este dotat cu doua slot-uri SIM pentru doua cartele SIM diferite. Pentru a instala bateria si cartela SIM in dispozitiv, va rugam sa urmati pasii de mai jos:

- Inlaturati capacul din spate al dispozitivului
- Tineti aparatul cu fata in jos si trageți capacul bateriei
- Introduceti cartela SIM in dispozitiv
- Atasati bateria
- Apasati capacul bateriei pana se fixeaza in pozitie



#### **Instalarea cardului de memorie**

Dispozitivul suporta card microSD, card multimedia folosit pentru a multiplica memoria dispozitivului. Cardul microSD este mic si ar trebui sa fie scos si instalat cu grija pentru a



evita orice fel de daune. Va rugam sa urmati pasii de mai jos pentru a instala cardul de memorie in dispozitiv:


- Opriti dispozitivul
- Inlaturati capacul bateriei
- Atasati cardul de memorie T-Flash in slot
- Atasati bateria



### **Incarcarea bateriei**

Atunci cand bateria este descarcata, dispozitivul atentioneaza printr-un sunet de avertizare si un mesaj ce semnalizeaza insuficienta bateriei. Va rugam sa urmati instructiunile de mai jos pentru a incarca dispozitivul:

- Introduceti conectorul incarcatorului in mufa din dispozitiv.
- Conectati incarcatorul la o priza de perete standard de curent alternativ.

Incarcare..... 

Incarcat complet..... 

Va recomandam ca inainte de prima utilizare a dispozitivului sa incarcati complet bateria. Este recomandat sa incarcati bateria pentru trei ore inainte de prima utilizare a dispozitivului.

## 2.2 PORNIREA SI OPRIREA

---

### **Pornirea dispozitivului**

Dupa instalarea cartelei SIM si incarcarea bateriei, sunteti pregatit pentru a porni dispozitivul.

- Apasati lung si mentineti apasata tasta Pornire / Opre pentru a porni dispozitivul.
- Primul ecran ce apare este cunoscut ca si ecran acasa.
- Trageti in lateral pictograma de blocare pentru a debloca ecranul.
- Daca ecranul se stinge apasati scurt tasta Pornire / Opre pentru a porni dispozitivul.

### **Oprirea dispozitivului**


- Apasati si tineti apasata tasta Pornire/Opre timp de 3 secunde.
- O fereastra pop-up apare, selectati Opre.
- Selectati OK pentru a confirma.



## 3. OPERATIUNI DE BAZA

### 3.1 APELAREA

---

#### Pentru a efectua apeluri

Daca pictograma  apare pe ecran, puteti efectua sau primi apeluri.

 Apasati  pentru a sterge un numar gresit.  
*Apasati si tineti apasat pentru a sterge intregul numar.*

#### Preluarea/Respingerea unui apel receptionat

Cand primiti un apel, un mesaj de notificare apare pe ecran.

Pentru a accepta apelul, glisati  catre dreapta. Daca doriti sa respingeti apelul, glisati  catre stanga.

### 3.2 MESAJE

---

Caracteristicile aparatului includ trimiterea si primirea SMS-urilor si a MMS-urilor.

### 3.3 CONTACTE

---

“Contacte” se refera la agenda telefonica ce permite stocarea numelor, numerelor de telefon, adreselor de email si a altor informatii. Puteti salva informatii precum nume, poza, numar de telefon, adrese de email, etc, pentru fiecare contact listat

in meniul Contacte.

### 3.4 EMAIL

---

Dispozitivul va permite sa compuneti, cititi si trimiteti emailuri.











## 4. ECRANUL PRINCIPAL

Din ecranul principal puteti accesa rapid functii comune, vizualiza notificari, apeluri pierdute, mesaje primite sau puteti sa verificati statusul conexiunii.

### 4.1 BARA DE NOTIFICARI

---

Bara de notificari afiseaza diferite informatii. Tabelul de mai jos listeaza diverse pictograme ce pot aparea pe bara de notificari a dispozitivului.

	Intensitatea rețelei de cartela SIM 1 sau cartela SIM 2
	Nivelul bateriei dispozitivului
	Mesaj scurt nou
	Notificare pentru apel pierdut
	Apel in curs
	USB conectat
	Setul de casti este conectat
	Bluetooth este activat
	Wi-Fi este conectat
	Reteaua GPRS este in utilizare

## 4.2 CUSTOMIZAREA ECRANULUI

Dispozitivul este dotat cu un ecran tactil cu display activ si acces la utilitati cu o singura atingere. Asa ca puteti glisa catre dreapta sau stanga pentru a naviga prin diferite ecrane ce pot accesa functiile preferate.

### Setarea imaginii de fundal

Puteti customiza imaginea de fundal a ecranului principal cu imagini de fundal predefinite sau cu fotografii facute cu dispozitivul.

- Apasati tasta meniu si selectati Imagine de fundal.

- Selectati imaginea de fundal dorita din optiunile urmatoare:
  - ES File explorer
  - Galerie
  - Imagini de fundal live
  - Tapet video
  - Imagini de fundal

### **Rotirea ecranului telefonului mobil**

- Orientarea majoritatea ecranelor se va schimba in modul de vizualizare landscape sau portrait atunci cand rotiti telefonul.

Accesati Setari > Afisare > Rotirea automata a ecranului pentru a dezactiva aceasta functie.

## **5. MULTIMEDIA**

Dispozitivul are mai multe optiuni multimedia, precum redarea fisierelor audio, camera, radio FM.

### **5.1 MANAGER DE FISIERE**

---

Puteti rasfoi, deschide si gestiona datele salvate in dispozitiv si in cardul de memorie accesand Manager fisiere. Dispozitivul pune la dispozitie un anumit spatiu pentru ca utilizatorii sa poata gestiona fisiere si suporta card microSD. Puteti folosi Managerul de fisiere pentru a gestiona convenabil diverse

directoare si fisiere de pe cardul microSD.

## 5.2 MUZICA

---

Folositi aplicatia Muzica pentru a reda fisiere de muzica. Melodiile salvate pe cardul microSD pot fi redade folosind aplicatia Muzica aflata in dispozitiv. Melodiile sunt clasificate in functie de Artisti, Albume si Cantece. Puteti defini liste preferate de redare apasand lung pe o melodie si selectand Adauga in lista de redare.

## 5.3 CAMERA

---

Dispozitivul este echipat cu camera foto si camera video ce va permit sa capturati fotografii si video.

Camera din spate are 8 megapixeli, cand alegeti dimensiunea de vizualizare pentru standard (4:3).

## 5.4 GALERIE

---

Puteti vizualiza imaginile capturate, clipurile video inregistrate si imaginile descarcate in Galerie. Dosarul cu imagini si cel video vor fi afisate. Selectati pentru a vizualiza fotografii sau clipuri video realizate cu camera. Imaginile sau video-urile vor fi afisate in miniaturi.

## 5.5 INREGISTRARE SUNET

---




Puteti utiliza aplicatia Inregistrare sunet pentru a inregistra

sunete si a salva inregistrările in telefonul dumneavoastra. Cand va aflati in interfata pentru inregistrarea sunetelor apasati tasta meniu pentru a selecta modul de inregistrare.

## 5.6 RADIO FM

---

Puteti utiliza telefonul pentru a asculta posturi de radio FM atunci cand castile originale sunt conectate in port. Va rugam sa apasati tastele laterale pentru a ajusta volumul.


Apasati  pentru a iesi din functia FM radio. Apasati (   ) pentru a cauta canale.

## 6. RETEA

### 6.1 WI-FI

---

Conectati-va la o retea wireless pentru a naviga pe Internet.

- Accesati Setari.
- Apasati 'ON' (ro. Activat) pentru a activa Wi-Fi.
- Apasati  Wi-Fi > Notificari de retea pentru a incepe detectarea retelelor. Retelele disponibile vor fi listate.
- Apasati Adauga retea pentru a adauga o conexiune.



## **NOTA:**

- In cazul in care o retea la care v-ati conectat cu success este salvata, informatiile de retea vor fi salvate intr-o fereastra pop-up pentru respectiva conexiune. Pentru a sterge informatiile din dispozitiv, selectati Eliminati.
- In cazul in care conexiunea selectata nu este criptata, pur si simplu apasati fereastra pop-up pentru a va conecta.
- Daca dispozitivul este criptat, va apare o fereastra pop-up, unde trebuie sa introduceti parola.
- Daca s-a realizat cu success conexiunea, pe bara de notificari va apare conexiunea Wi-Fi.

## **6.2 3G**

---

Dispozitivul suporta protocol WCDMA. Inainte sa introduceti / inlaturati cartela SIM va rugam sa va asigurati ca dispozitivul este oprit.

## **6.3 BLUETOOTH**

---

Cautati dispozitivul si acceptati / transferati date. Datele primite sunt salvate automat in director.

- Accesati Setari.
- Bifati Bluetooth pentru a porni Bluetooth.

Pentru a face dispozitivul dumneavoastra vizibil, selectati

setarile bluetooth-ului si bifati “vizibil”.

## 7. SETARI

Accesati Setari pentru a vizualiza si ajusta setarile dispozitivului. Meniul Setari este clasificat in: Wireless & Retele, Profiluri audio, Afisare, Stocare, Acumulator, Aplicatii, Acces la locatie, Securitate, Limba si metoda de intrare, Creati o copie de rezerva si resetati si Sistem.

### 7.1 GESTIUNE SIM

---

Dispozitivul suporta doua cartele SIM care pot fi gestionate accesand submeniul Gestiune SIM. Puteti vizualiza/modifica setarile roaming ale cartelei utilizand meniul.


### 7.2 WIRELESS & RETELE


---

Accesati submeniul pentru a modifica/vizualiza Wi-Fi, Bluetooth, Retele mobile, setari VPN. Pentru detalii legate de Wi-Fi si Bluetooth va rugam sa consultati sectiunile dedicate.

### 7.3 PROFILURI AUDIO

---

Dispozitivul pune la dispozitie patru profiluri predefinite ce permit operatiuni ale dispozitivului care se potrivesc cel mai bine in mediul in care va aflati. Profilurile sunt General, Silentios, Intalnire si Exterior. Atingand pictograma 

puteti adauga un nou profil; Apasati  pentru a reveni la setarile initiale.

## 7.4 AFISARE

---

Cu aceasta functie puteti configura caracteristicile de afisare ale dispozitivului, inclusiv luminozitate, rotire automata, etc.

## 7.5 STOCARE

---

Vizualizati si gestionati spatiul de stocare al dispozitivului.

Spatiul total si spatiul disponibil: Listeaza capacitatea spatiului de stocare din cardul microSD instalat in dispozitiv si cantitatea pe care ati utilizat-o pentru stocarea fotografiilor, fisierelor video, audio si a altor fisiere. Demontati cardul microSD: Demontati cardul microSD din dispozitiv astfel incat sa formatati cardul sau sa il inlaturati in conditii de siguranta cand dispozitivul este pornit.

Spatiul disponibil: Capacitatea de stocare interna a telefonului, folosita de sistemul de operare, componentele sale, aplicatiile (inclusive cele descarcate) si datele permanente sau temporare.

## 7.6 ACUMULATOR

---

Puteti verifica statusul acumulatorului accesand acest submeniu.

## 7.7 APLICATII

---

Acest submeniu va permite sa gestionati toate aplicatiile instalate, care ruleaza sau pe cele salvate in memoria dispozitivului si pe cardul SD. Puteti inlatura sau gestiona aplicatiile instalate, vizualiza si controla aplicatiile care ruleaza, permite instalari ale aplicatiilor din afara magazinului Play.

## 7.11 ACCES LA LOCATIE

---

Aparatul suporta Global Positioning System (GPS).

## 7.12 SECURITATE

---

Puteti proteja dispozitivul de utilizatorii neautorizati setand codul PIN sau introducand o parola.

### **Activati sau dezactivati PIN-ul cartelei SIM**

Atunci cand codul PIN este activat, vi se va solicita introducerea acestuia inaintea efectuarii unui apel.

- Accesati Aplicatii > Setari > Securitate
- Din meniul Blocare card SIM selectati Activati blocarea cardului SIM
- Selectati un card SIM.
- Atingeti Blocare SIM pentru a folosi PIN. Bifati pentru a activa, debifati pentru a dezactiva.
- Introduceti codul PIN curent.
- Pentru a schimba codul PIN, selectati Schimba PIN.
- Introduceti codul PIN vechi.

- Introduceți noul cod PIN pentru a confirma.

### **Setarea blocării ecranului**

Puteti seta o metoda de blocare a ecranului in functie de Model, Cod PIN sau parola.

- Accesati Setari > Securitate
- Selectati Blocarea ecranului
- Selectati forma dorita (Fara, Glisare, Deblocare vocala, Model, PIN sau parola)

### **7.13 LIMBA SI METODA DE INTRARE**

---

Folositi setarile din Limba si metoda de intrare pentru a selecta varianta lingvistica a textului din dispozitiv si pentru a configura tastatura de pe ecran, incluzand cuvinte pe care le-ati adaugat in dictionar.

### **7.14 COPIE DE REZERVA & RESETARE**

---

Puteti face setari de confidentialitate pentru a gestiona informatii personale precum stabilirea unei copii de rezerva, restabilirea automata sau resetarea configurarii din fabrica.

### **7.15 CONTURI**

---

Folositi sectiunea Conturi pentru a adauga, inlatura sau gestiona contul dumneavoastra Google sau alte conturi suportate. Puteti, de asemenea, sa utilizati aceste setari

pentru a controla cum si daca aplicatiile trimit, primesc si sincronizeaza date in functie de propriul program, si daca toate aplicatiile pot sincroniza automat datele utilizatorului.

## 7.16 DATA SI ORA

---

Puteti opta pentru setarea datei, orei si a fusului orar utilizand submeniul. Utilizati modul Automat daca doriti alte setari decat cele ale retelei. Utilizati formatul de 24 de ore: Puteti activa sau dezactiva. Alegeti formatul de data: selectati din multitudinea de formate.

## 7.17 PLANIFICARE PORNIRE/OPRIRE

---

Puteti seta timpul pentru pornire/oprire automata. Activati functia inainte de a seta timpul.

## 7.18 ACCESIBILITATE

---

Puteti utiliza setarile din Accesibilitate pentru a configura plug-in-uri de accesibilitate pe care le-ati instalat pe dispozitiv.

## 7.19 DESPRE TELEFON

---

Puteti vizualiza informatii de sistem precum Stare, Informatii legale, Numar model, Versiune Android si asa mai departe. Pont: In versiunea JellyBean, optiunile pentru dezvoltator sunt ascunse. Pentru a le afisa mergeti la "Despre telefon" si

apasati de 4 ori pe "Numarul versiunii". Apoi sectiunea "Optiuni dezvoltator" va fi disponibila.

## **8. APLICATII**

In scop de divertisment, dispozitivul dumneavoastra este prevazut cu mai multe aplicatii interesante si utilitare. Va rugam sa va asigurati ca ati efectuat setarile GPRS din dispozitiv, pentru a accesa aplicatiile. Contactati operatorul pentru setarile GPRS.

### **8.1 CALCULATOR**

---

Calculatorul va ajuta sa efectuati functii aritmetice de baza, cum a ar fi adunarea, scaderea, inmultirea si impartirea.

### **8.2 CEAS**

---

Functia Ceas ofera acces catre setarea alarmei.

### **8.3 GMAIL**

---

Gmail este serviciul de email web-based Google. Google Mail este configurat atunci cand setati pentru prima data dispozitivul. In functie de setarile de sincronizare, Google Mail instalat pe dispozitiv este sincronizat automat cu contul de Google Mail de pe web.

Accesati Gmail; Selectati Creati un cont nou sau Autentificare

in contul Google.

Urmati instructiunile de pe ecran pentru a va loga sau pentru a crea un utilizator si o parola Gmail.

Atunci cand veti fi logat veti putea sa cititi si sa trimiteti emailuri din contul Gmail.

## 8.4 LOCAL

---

Local va ajuta sa descoperiti punctele de interes din apropiere. Cautati rapid restaurant, cafenele, baruri si alte locuri, in timp ce sunteti pe drum.

Cu Local e simplu sa evaluati locurile pe care le vizitati. Evaluand locuri veti primi recomandari de locatii bazate pe locatiile care va plac si recomandari din partea prietenilor.

## 8.5 MAGAZIN PLAY

---

Magazinul Play va ajuta sa gasiti si sa descarcati aplicatii si jocuri distractive pentru dispozitivul dumneavoastra.

- Accesati Magazin Play si setati un cont Google.
- Selectati Creati un cont pentru un cont nou sau Conectati-va pentru a va conecta cu contul existent.

Conectandu-va puteti incepe sa cautati si sa descarcati aplicatii din magazinul Play. Accesati Aplicatii pentru a vizualiza lista aplicatiilor disponibile si accesati Jocuri pentru a vizualiza lista jocurilor disponibile.



## 9. SPECIFICATII

Sistem de operare	Android 4.2
Culoare fata/spate	Black/Black
Procesor	Dual Core 1,2 GHz
Demensiune ecran	4,5" IPS
Rezolutie	854 × 480
Tip ecran	Multitouch, 5 points
Dual Sim	Yes
Tip SIM	1 Normal SIM + 1 Micro SIM
2G Network	850/900/1800/1900
3G Network	900/2100
Camera frontala	0,3 MP
Camera principala	5MP, Flash
Memorie RAM	512 MB
Memorie flash	4 GB
Wi-Fi	Yes
Bluetooth	Yes
GPS	Yes
EDGE	Yes, Class 10
GPRS	Yes, Class 12
Difuzor	0,5 W

Porturi	audio jack, microUSB
Dimensiuni	132 x 66.8 x 9.5 mm
Greutate	140 g
Baterie	1750 mAh
Format video	AVI, MP4, 3GP, RMVB
Format audio	MP3, MIDI, WAV, AAC, AMR
Format foto	JPG, BMP, PNG
Altele	FM Radio, Proximity sensor, Accelerometer
Pachetul contine	1 x UTOK 450D Smartphone; 1 x Battery; 1 x USB Cable; 1 x Charger; 1 x Earphones; 1 x User Manual.
SAR VALUE	0,327 W/Kg
Valoare SAR maxim admisa	2,0 W/Kg

**Declaratia de conformitate pentru produsul 450 D, marca UTOK poate fi accesata online la adresa web [www.utok.com](http://www.utok.com)**

# **USER MANUAL**

## **UTOK 450D**

## **TABLE OF CONTENTS**

1.	Understanding your device	32
2.	Getting started	34
3.	Basic operations	37
4.	Home screen	42
5.	Multimedia	44
6.	Network	46
7.	Settings	48
8.	Aplications and utilities	52
9.	Technical specifications	54

## ALL RIGHTS RESERVED

---

©2013. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners. While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice. Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with us, and we do not endorse or assume liability for them. If you access such sites, take precautions for security or content. The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), we do not warrant that any our software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted.



User's Manual is provided just to guide the user about the functionality of the device. It is not a certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.

## SAFETY PRECAUTIONS

---

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

## Notice:

- Do not dismantle the device or accessories, otherwise the manufacturer will not be liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.



***If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.***

# 1. UNDERSTANDING YOUR DEVICE

## 1.1 GENERAL INFO

---

UTOK 450D is a multi SIM phone that encloses features, such as **Andriod version 4.2, Wi-Fi, 1.2 GHz Dual Core Processor, 5 MP digital Camera**, etc. This phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called SIM1, and the second one in the slot2 is known as SIM2. You can select to operate SIMs as per your personal and professional needs.



## 1.2 DEVICE OVERVIEW

---



---

1. Earpiece

2. Touch Screen

3. Home Key

4. Menu Key

5. Back Key

6. Front camera lens

7. Earphone Jack

8. Volume control key

9. USB port

10. Camera lens

11. Torch

12. Battery cover

13. Power Key

14. Speaker

---

## 2. GETTING STARTED

### 2.1 INSTALLING CARDS & BATTERY

---

Please switch off your device before inserting or removing the battery / SIM card or memory card.

#### **Installing SIM Card and Battery**

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the back cover of the device.
- Hold the device with the front facing downwards and pull the battery cover.
- Insert the SIM cards in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.



## Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the battery cover.
- Slot the T-Flash memory card into the slot.
- Attach the battery.
- Fix the battery cover until it mount properly into place.




## Charging the Battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging..... 

Fully Charged..... 

You should fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

## 2.2 POWERING ON/OFF THE DEVICE

---

### Turning On the Device

After installing the SIM cards and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home Screen.
- Drag the lock icon sideways to unlock the screen.

- If the screen turns off, then short press the Power Key to turn on the display.

### Turning Off the Device


- Press and hold the Power Key for 3 seconds.
- A pop-up window appears, select Power off.
- Select OK to confirm.

## 3. BASIC OPERATIONS

### 3.1 CALLING



---

#### To Make Calls

If the icon  appears on the screen, then you can make or receive calls.



To make a call, please follow the steps mentioned below:

- Enter the Main Menu, select Phone.
- Enter the phone number using the on-screen keyboard.

 Tap  to delete a wrong number. Tap and hold it to erase the entire number.

- After entering phone number, tap .
- To end the call, tap .

## **Answer/Reject an Incoming Call**

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards right. If you wish to reject the call, drag  towards left.

## **Other Options during the call**

### **To put a call on hold**

If you are having a call conversation and there is another incoming call, select hold to put the first call on hold. To unhold the call, select unhold.

### **To set up conference calls**



- If you are already having a call conversation, select Hold to put the call on hold.
- Select Add Call to make another call.
- After connecting to the second call, select merge calls to set up the conference call.

## **3.2 MESSAGING**

---

Your device features sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service). Go to Main Menu and then select Messaging.


## Creating a Message

- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.


## Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

### To reply to a text message

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Select Type to compose to enter your message.
- Tap  to Send.

### To forward a text message

- Enter the Main Menu, select Messaging.
- Tap to view a message thread.
- Press and hold a message to view the message options.
- Select Forward.
- In the To field, enter the recipient's phone number.
- Tap  to Send.

### To delete all text messages

- Enter the Main Menu, select Messaging.

- Tap Menu > Delete all threads.
- All the messages will be deleted.



### **To copy message text**

You can use this function to copy the text from a message to a new message you are composing.

- Enter the Main Menu, select Messaging.
- Select a message thread to open it.
- Press and hold the message to view the submenu options.
- Select 'Copy'.
- Go to Compose new message.
- Press and hold Type to compose.
- Select 'Paste' to paste the copied text to your new message.

### **MULTIMEDIA MESSAGE**

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, etc, tap .



- To insert text, tap Type to Compose, and then enter your message.

### 3.3 CONTACTS

---

Contacts refer to the phonebook that lets you store names, phone numbers, e-mail addresses and other information. You can save information such as name, picture, phone numbers, e-mail addresses, etc for each contact listed in your Contacts menu.

#### To add a Contact

- Enter the Main Menu select Phone.
- Enter number > Tap Menu key > Add to contacts > Create New contact.
- Select the storage
- You can enter contact information such as name, phone number, email address etc, if you select storage as "Phone".
- Tap Done to save the contact.

**Tip:** Or enter the Main Menu and select People, tap



create New contact.

#### To import contacts

- Enter the Main Menu select People.
- Tap Menu key > Import/Export.
- Select to import contacts from Phone contact/ Phone storage/ SIM Card/ SD Card.

- Select a particular source to import the contacts from.
- Select Next.
- Select the destination, such as Phone to copy contacts to.
- Select Next.
- Select “Select All” to import all contacts or mark the required contacts.
- Select OK.

### 3.4 EMAIL

---

Your device allows you to compose, read and send emails.

### 3.5 BROWSER

---

Browser is a tool which enables you to access the Internet.









## 4. HOME SCREEN

From Home screen, you can quickly access common features, view notifications of missed calls, received messages and check connection status.

### 4.1 STATUS BAR

---

The Status bar icons indicate different types of information. The table below lists various icons that might appear on the status bar of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	USB connected
	Wi-Fi is connected.
	Bluetooth is activated
	GPRS network is in use.

## 4.2 APPLICATION TAB

---

Tap Application Drawer to access applications and settings of the device. The Application tab enables you to access the Main Menu and choose among the various utilities / features available in the device.

## 4.3 CUSTOMIZING SCREEN

---

The device features a touch screen with active displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite

features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

### **Shortcuts**

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

### **Widgets**

Save time with live updates right on Home screen and get all of your personalized updates at one place.


### **Setting the wallpaper**

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- In the idle mode, tap Menu Key > Wallpaper.
- Select your desired wallpaper from the various options: ES File Explorer, Gallery, Live Wallpapers, Video Wallpaper, Wallpaper.

### **Rotating Your Mobile Phone Screen**

The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.

- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.

## **5. MULTIMEDIA**

Your device features various multimedia options, such as Music Player, Camera and Video Player.

## 5.1 FILE MANAGER


---

You can browse, open and manage the data saved in the Device and Memory card by accessing the File Manager sub-menu. The device provides a certain space for users to manage files and supports the T-Flash card. You can use the file browser to conveniently manage various directories and files on the T-Flash card.

## 5.2 MUSIC

---

Use the Music player to play music files. The songs saved in your SD Card can be played using the Music Player of the device.

- Tap  select Application tab
- Select Music

The songs are categorized by Artists, Albums and Songs. You can make your favorite playlist by long pressing on a song and selecting Add to Playlist.

## 5.3 CAMERA

---


Your device is equipped with camera and camcorder, which enables you to capture photos and videos.

## 5.4 SOUND RECORDER

---

You can use the sound recorder to record sounds and also

select to save the recordings in your phone.

Tap  > Sound Recorder. When in the sound recorder interface, press menu key to select recording mode.

## 5.5 GALLERY

---

You can view the captured images, recorded video clips, and downloaded images in the Gallery.




The picture folder and video folder will be displayed.

Select to view the camera pictures or camera videos. The images or videos will be displayed in thumbnails.

## 5.6 FM radio

---

You can use your phone to listen to FM radio stations once the original Headset is plugged into the connector. Please press the side key to adjust music volume.

Tap  to exit FM radio function. Tap the (   ) to search the channels.


# 6. NETWORK

## 6.1 WI-FI

---

Connect to a wireless network to browse Internet.

- Enter Main Menu and tap Settings.

- Tap 'ON' to activate Wi-Fi.
- Tap  Wi-Fi > Network notification to start detecting networks. The available networks will then be listed.
- Tap Add Wi-Fi network to add a connection.

**Note:**

- If the device before the connection is successful, the equipment information will be saved in the pop-up window selected connection, select forget to remove device information.
- If the device does not encrypt selected connection in the pop-up window to connect.
- If the device is encrypted, the pop-up window will appear, enter the password.
- Network connection is successful; the status bar icon appears Wi-Fi connection.

## 6.2 3G

---

The device supports WCDMA protocol. Please make sure that you device is turned off, then insert or remove the SIM card.

## 6.3 BLUETOOTH

---

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

- Access Settings by entering the main menu
- Check Bluetooth to turn on Bluetooth

- To make your device discoverable, select bluetooth settings and check discoverable.

## **7. SETTINGS**

Select Settings to view and adjust the settings of your device. The Settings menu is categorized into: Wireless & networks, Audio profiles, Display, Storage, Battery, Apps, Location services, Security, Language & input, Backup & reset, Accounts and System.

### **7.1 SIM MANAGEMENT**

---

Your device supports two SIM cards, which can be managed by accessing the SIM Management sub-menu. You can view/change the roaming settings of the cards using this menu.

### **7.2 WIRELESS & NETWORKS**

---



Access this sub-menu to change/view the Wi-Fi, Bluetooth, Mobile Networks, VPN settings, etc. Please refer to network section for detailed information on Wi-Fi and bluetooth.

### **7.3 AUDIO PROFILES**

---

Your device provides four pre-defined user profiles that allow the operations of the device to best suit the environment you



are in. The profiles are General, Silent, Meeting and Outdoor. The Touch  icon adds a new profile; tap the  icon to select Reset to restore the default settings.

## 7.4 DISPLAY

---

With this function you can configure the display characteristics of the device including brightness, Auto-rotate screen, etc.

## 7.5 STORAGE

---

View and manage the data storage of your device:

Total Space and Available Space: Lists the amount of space on the microSD card installed in your device and the amount you have used to store photos, videos, music, and other files.

Un-mount SD Card: Un-mounts the microSD card from your device so that you can format the card or safely remove it when the device is on.

Available Space: The amount of internal phone storage used by the operating system, its components, applications (including those you downloaded), and their permanent and temporary data.

## 7.6 BATTERY

---

You can check the battery status of the device by accessing

this sub-menu.

## 7.7 APPLICATIONS

---

This sub-menu enables you to manage all the installed, running and applications saved in the device memory and SD card. You can remove and manage installed applications, view and control running applications, allow installation of non we build in market applications.

## 7.8 LOCATION ACCESS

---

Your device supports Global Positioning System (GPS).

## 7.9 SECURITY

---

You can protect your device from unauthorized users by setting the PIN code or entering a password.

### **Enable or Disable SIM card PIN**

When PIN code is enabled, you are required to enter the PIN code before making a call.

- Go to Application Drawer > Settings > Security.
- On the SIM card lock tab, select Set up SIM card lock.
- Select a SIM card.
- Tap Lock SIM card to use PIN. Check to enable, uncheck to disable.
- Enter the current PIN code.
- To change the PIN code, select Change PIN.

- Enter the old PIN code.
- Enter the new PIN code and confirm.

### **Setup Screen Lock**

You can set up a lock for your screen in form of Pattern, PIN code or password.

- Go to Settings > Security
- Set up screen lock
- Select a desired form (None, Slide, Pattern, PIN or password)

## **7.10 LANGUAGE AND INPUT**

---

Use the Language & Keyboard settings to select the language for the text on your device and for configuring the onscreen keyboard, including words that you've added to its dictionary.

## **7.11 BACKUP & RESET**

---

You can use the Privacy settings to manage your personal information, such as back up my data, automatic restore and factory data reset.

## **7.12 ACCOUNTS**

---

Use the Accounts to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

## 7.13 DATE AND TIME

---

You can select to set date, time and time zone using this sub-menu.

Use Automatic unless you need to override the network values.

Use 24-hour format: Select to set 24-hour formats on or off.

Choose Date format: Select from a variety of formats.

## 7.14 SCHEDULE POWER ON/OFF

---

You can set the time for auto power on /off. Do turn the status on before using that function, and then the time.

## 7.15 ACCESSIBILITY

---

You can use the Accessibility settings to configure any accessibility plug-ins you have installed on your device.

## 7.16 ABOUT PHONE

---

You can view system information Including Status, Legal information, Model number,Android version and so on.

# 8. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities. Please

ensure that you have GPRS setting in your device to access the applications. Contact your operator for GPRS settings.

## 8.1 CALCULATOR

---

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.

## 8.2 CLOCK

---

This function gives you an access to the alarm clock.

Go to  → Clock

➤ Tap  > tap  to add alarm.

## 8.3 GMAIL

---

Gmail is Google's web-based email service. Google Mail is configured when you first set up your device. Depending on your synchronization settings, Google Mail on your device is automatically synchronized with your Google Mail account on the web.

Go to Main Menu > Gmail.

Select Create or Sign in your Google account.

Follow the on screen instructions to login or create your Gmail username and password.

Once logged in, you can begin reading and sending emails from your Gmail account.

## 8.4 LOCAL

---

Places helps you discover nearby places you'll love. Quickly search for Restaurants, Cafes, Bars and other places, while on the go. Places also makes it easy to quickly rate the places you visit. By rating places you'll get place recommendations based on the places you like and recommendations from your friends.

## 8.5 PLAY STORE

---

Play store allows you to find and download applications and fun games for your device.

- Go to Main Menu > Play Store and setup your Google account.
- Select Create to create a new account or Sign in to sign in your existing account.

Once you are signed in you can begin searching and downloading programs from the market. Tap Apps to view the list of applications available and tap Games to view the list of games available.

## 9. SPECIFICATIONS

<b>OS</b>	Android 4.2
<b>Color front/back</b>	Black/Black
<b>CPU</b>	Dual Core 1,2 GHz

<b>Display</b>	4,5" IPS
<b>Resolution</b>	854 × 480
<b>Display type</b>	Multitouch, 5 points
<b>Dual Sim</b>	Yes
<b>Sim Type</b>	1 Normal SIM + 1 Micro SIM
<b>2G Network</b>	850/900/1800/1900
<b>3G Network</b>	900/2100
<b>Front camera</b>	0,3 MP
<b>Back camera</b>	5MP, Flash
<b>RAM</b>	512 MB
<b>Flash memory</b>	4 GB
<b>Wi-Fi</b>	Yes
<b>Bluetooth</b>	Yes
<b>GPS</b>	Yes
<b>EDGE</b>	Yes, Class 10
<b>GPRS</b>	Yes, Class 12
<b>Speaker</b>	0,5 W
<b>Ports</b>	audio jack, microUSB
<b>Dimensions</b>	132 x 66.8 x 9.5 mm
<b>Weight</b>	140 g
<b>Battery</b>	1750 mAh
<b>Video Formats</b>	AVI, MP4, 3GP, RMVB
<b>Audio Formats</b>	MP3, MIDI, WAV, AAC, AMR

<b>Photo Formats</b>	JPG, BMP, PNG
<b>Others</b>	FM Radio, Proximity sensor, Accelerometer
<b>Package contains</b>	1 x UTOK 450D Smartphone; 1 x Battery; 1 x USB Cable; 1 x Charger; 1 x Earphones; 1 x User Manual.
<b>SAR VALUE</b>	0,327 W/Kg
<b>Maximum value for SAR</b>	2,0 W/Kg

\* The standby time and maximum talk time depend upon the network signals and settings.

**Declaration of conformity for UTOK product, model 450 D is available online at [www.utok.com](http://www.utok.com)**